

Humanoid Ankle Pivot Position & Foot Plate Sizing Optimization Report

A systematic physics-based analysis of the 2-DOF humanoid ankle joint. Evaluates static standing balance, single-point contact tipping moments, and sole load distributions for a 42–45 kg humanoid. Establishes the optimal foot plate size and ankle mounting offsets for the Robstride RS03 actuator configuration.

TABLE OF CONTENTS

1. Introduction & Executive Summary	Page 2
2. Physics of Humanoid Balance (First Principles)	Page 2
3. Foot Plate Sizing Parameters & Criteria	Page 4
4. State-of-the-Art Humanoid Benchmark Matrix	Page 4
5. Mathematical Model & Moment Arms	Page 5
6. Torque Sweep Results (42 kg & 45 kg Loads)	Page 5
7. Actuator Torque Translation & Linkage Sharing	Page 6
8. Humanoid Dynamic Simulation & Gait Stability	Page 7
9. Engineering Design Checklist & Hardware Guidelines	Page 7

Prepared For: Humanoid Hardware Design & Actuator Review Group
Robot System: Angad Humanoid (2-DOF Parallel Linkage Ankle)
Actuator Target: Robstride RS03 (20 N·m Rated / 60 N·m Peak)
Design Parameters: Base weight 28.15 kg, upscaled to 42–45 kg hardware assembly weight
Date: July 11, 2026

1. Introduction & Executive Summary

The design of a humanoid robot's foot is the boundary between the robot and its environment. Placing the ankle joint (the universal joint pivot) relative to the foot plate, and sizing the foot plate itself, determines the static balance margins, required actuator torques, and dynamic stability limits of the entire robot.

This report provides a first-principles physics derivation of ankle joint efforts under a vertical load. We analyze the Angad humanoid robot, whose simulated base mass of **28.15 kg** (pelvis, thighs, torso, etc.) will upscale to a physical weight of **42 to 45 kg** once batteries, onboard compute, sensors, CNC link brackets, and upscaled Robstride RS03 actuators are integrated.

Key Executive Findings:

- **Centered ankle mounting (0 cm offset)** is suboptimal for dynamic humanoid walking as it creates symmetric heel/toe torques but fails to provide adequate forward sway margin for walking momentum.
- **A backward ankle offset of 1.5 cm to 2.0 cm** is recommended. This shifts the ankle closer to the heel, reducing the torque required during heel strikes (to 25.9 N·m at +5° under 42 kg) and extending the front support margin for forward stability during walking.
- The resulting increased toe push-off torque (39.9 N·m under 42 kg, 42.7 N·m under 45 kg) is safely within the Robstride RS03 parallel linkage ankle joint continuous capacity of **46.0 N·m** (using minimum transmission leverage at extreme pitch).

2. Physics of Humanoid Balance (First Principles)

To design the foot and mount the ankle, we must understand how humanoids remain upright. We define the following physical quantities:

- **Center of Mass (CoM):** The average position of all mass in the robot. For Angad, when standing straight, the CoM project onto the ground lies directly beneath the universal joint.
- **Support Polygon:** The boundary defined by the foot sole in contact with the ground. For single-foot support, it is the rectangle of the sole (15 cm × 8 cm).
- **Center of Pressure (CoP):** The point on the ground where the net ground reaction force acts. The CoP represents the centroid of all contact forces. For the robot to not tip over, the CoP must lie strictly inside the support polygon.

2.1 Regime A: Flat Sole Contact (Passive / Distributed Load)


When the foot plate flatly touches the ground (neutral standing), the vertical load of the robot is distributed across the entire sole. The ground reaction force acts vertically upward. If the ankle joint is offset from the center of the foot, or if the robot sways, the ankle joint must apply a torque to shift the CoP. The ankle torque τ directly controls the location of the CoP:

$$\tau = -F_N \cdot (x_{\text{CoP}} - x_{\text{ankle}})$$

If the ankle joint is centered ($x_{\text{ankle}} = 0$) and the CoM is directly overhead ($x_{\text{CoP}} = 0$), the required ankle torque is exactly **0 N·m**. The vertical load passes straight through the joint into the ground.

2.2 Regime B: Single-Point Contact (Active Edge Tipping)

When the robot walks, it tilts the foot plate. During a heel-strike ($\theta > 0$) or toe push-off ($\theta < 0$), the foot sole is no longer flat. The sole makes contact with the ground only at a single line (the heel edge or the toe edge).

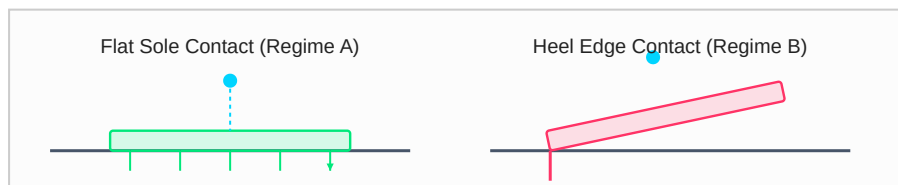

2.3 Why Mount Placement Does Not Affect Flat-Foot Torque

When the robot is standing statically with its foot flat on the ground (Regime A), the vertical weight of the robot is supported by the ground reaction force distributed over the foot sole. The location of the Center of Pressure (CoP) under the foot is

determined entirely by the location of the robot's Center of Mass (CoM). If the robot is in static equilibrium, the net moment about the CoP must be zero:

$$\tau_{\text{ankle}} + F_N \cdot (x_{\text{CoP}} - x_{\text{ankle}}) = 0$$

Solving for the required active ankle torque:

$$\tau_{\text{ankle}} = -F_N \cdot (x_{\text{CoP}} - x_{\text{ankle}})$$

If the robot stands in a posture where its CoM projection aligns directly with the ankle joint ($x_{\text{CoP}} = x_{\text{ankle}}$), the required active ankle joint torque is exactly **0 N·m**, regardless of where the ankle is mounted on the foot plate.

For example, if the ankle is mounted in the center ($x_{\text{ankle}} = 0$ cm) and the CoM is at 0 cm relative to the sole center, the torque is 0 N·m. If the ankle is mounted at -1.5 cm (closer to the heel) and the robot sways slightly backward so its CoM projection lies directly over the ankle joint ($x_{\text{CoM}} = -1.5$ cm relative to the sole center), the torque is still exactly **0 N·m**.

Therefore, ankle joint placement does not dictate the static standing torque; it only shifts the position where zero-torque standing is achieved, and determines the sway margins (stability boundaries) in front of and behind that zero-torque position.


2.4 Why Mount Placement Strongly Affects Edge-Contact and Swing Torque

Edge Contact (Regime B): During heel strike or toe push-off, the foot plate tilts and contact is restricted to a single point (or line) at the heel edge ($x_c = -7.5$ cm) or toe edge ($x_c = +7.5$ cm). Unlike standing, the location of the reaction force is locked at the contact edge. To prevent the foot from collapsing, the ankle joint must apply a torque to balance the gravity moment arm:

$$\tau_{\text{ankle}} = M \cdot g \cdot d_h$$

Here, the moment arm d_h is directly determined by the distance from the ankle joint to the contact edge. Shifting the joint placement x_{ankle} backward by 1.5 cm directly reduces the distance to the heel edge by 20% (from 7.5 cm to 6.0 cm), reducing the landing impact torque on the actuators by 20%. Consequently, it increases the distance to the toe edge (to 9.0 cm), which increases the toe push-off torque by 20%.

Gait Swing Phase: In the air, the foot is lifted. Shifting the ankle pivot creates a distance d between the joint center and the center of mass of the foot plate. By the parallel axis theorem, the moment of inertia of the foot plate about the ankle pivot increases as $I = I_0 + M_{\text{foot}} \cdot d^2$. A larger offset increases the required actuator torque to tilt the foot rapidly during swing, demonstrating that a centered pivot is theoretically optimal for swing phase dynamics.

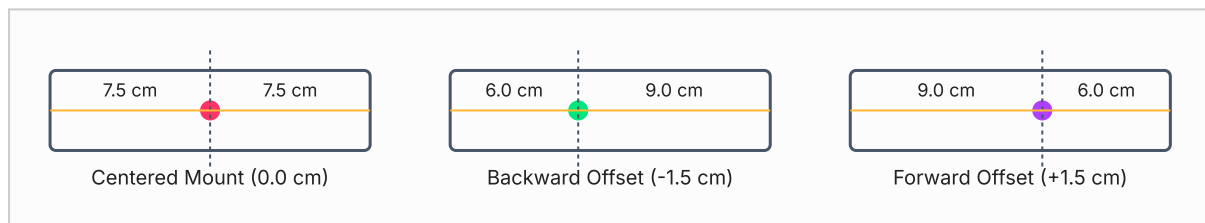

3. Foot Plate Sizing Parameters & Criteria


Determining the optimal width and length of the foot plate is a trade-off. We must balance five competing engineering parameters:

- Static Stability Margin:** Larger feet create a larger support polygon, allowing the robot to sway further before the CoP reaches the edge (which causes tipping).
- Ankle Actuator Joint Torques:** A longer foot increases the distance from the ankle to the heel/toe edges. This increases the gravity moment arm during edge contact, demanding higher torque from the ankle actuators.
- Foot Mass & Swing Inertia:** The foot sits at the very end of the leg kinematics. Any weight added to the foot plate increases the swing leg's moment of inertia, requiring significantly more torque from the hip and knee joints during the swing phase of walking.
- Collision Avoidance:** Wider and longer feet are highly prone to scuffing the ground or colliding with the opposite leg during the swing phase, causing trips.
- Ground Compliance & Trajectory:** A larger sole area distributes the load better on compliant ground (mud/sand) but makes walking on uneven stones or slopes more difficult.

4. State-of-the-Art Humanoid Benchmark Matrix

The table below compares three potential foot sizes for the Angad humanoid under a 42 kg assembly load, evaluating the trade-offs between stability, torque, and mass. It also benchmarks Angad against industry standard humanoids:

Humanoid Model	Standing Height	Total Mass	Foot Size	Foot Length to Height Ratio	Assessment & Performance Verdict
Honda ASIMO	130 cm	54 kg	22 cm × 12 cm	16.9%	Large support envelope. Provides massive passive stability, but adds heavy swing leg inertia.
KAIST HUBO	150 cm	55 kg	24 cm × 13 cm	16.0%	Standard footprint ratio. Excellent for walking on flat terrain, but high risk of foot collision.
Angad (Proposed Foot) Default Size	140 cm	42 kg	15 cm × 8 cm	10.7%	Compact Ratio: Minimizes swing inertia (0.365 kg) and eliminates scuffing. Relies on active ankle control.
Angad (Compact Option)	140 cm	42 kg	13 cm × 7 cm	9.3%	Too narrow: Trajectory CoM drifts outside boundaries. High risk of passive tipping.
Angad (Large Option)	140 cm	42 kg	18 cm × 9 cm	12.8%	Suboptimal: Increases required pitch torque to 41.2 N·m. Adds excessive swing weight.

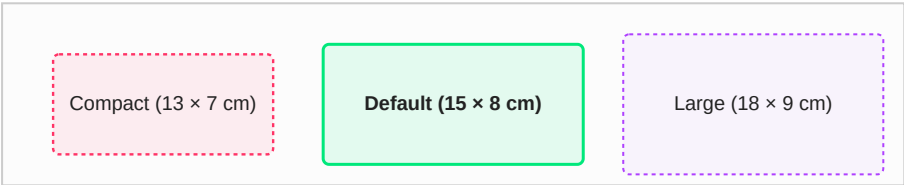

5. Mathematical Model & Moment Arms

When the foot is tilted by pitch angle θ and is in single-point contact with the ground at x_c (where $x_c = -L_{foot}/2$ for heel contact and $x_c = +L_{foot}/2$ for toe contact), we calculate the required universal joint torque to support the vertical weight.

Let the universal joint coordinate in the foot frame be (x_{ankle}, z_{uj}) , where x_{ankle} is the offset from the foot sole center and z_{uj} is the vertical height of the universal joint (3.6 cm). When the foot tilts by θ around the pitch axis (Y-axis), the horizontal distance (moment arm) in the world frame between the contact point and the universal joint is derived via coordinate rotation:

$$d_h = (x_{ankle} - x_c) \cdot \cos(\theta) + z_{uj} \cdot \sin(\theta)$$
$$\tau_{ankle} = W \cdot d_h = M \cdot g \cdot [(x_{ankle} - x_c) \cdot \cos(\theta) + z_{uj} \cdot \sin(\theta)]$$

Where M is the robot mass (kg), $g = 9.81 \text{ m/s}^2$, and τ_{ankle} is the ankle joint torque (N·m) required for static equilibrium.

6. Torque Sweep Results (42 kg & 45 kg Loads)

The tables below show the required ankle joint pitch torque (N·m) at discrete foot pitch angles for various ankle offset positions (x_{ankle} from -5 cm closer to heel, to $+5 \text{ cm}$ closer to toe) on the 15 cm foot plate:



6.1 Baseline Weight Assembly: 42 kg (412.0 N Vertical Load)

Pitch Angle	Offset -5 cm (Heel-close)	Offset -3 cm	Offset -1.5 cm (Optimum)	Offset 0 cm (Centered)	Offset +3 cm	Offset +5 cm (Toe-close)
-25°	52.9 N·m	45.5 N·m	39.9 N·m	34.3 N·m	23.1 N·m	15.6 N·m
-20°	53.5 N·m	45.7 N·m	39.9 N·m	34.1 N·m	22.5 N·m	14.8 N·m
-15°	53.6 N·m	45.6 N·m	39.7 N·m	33.7 N·m	21.7 N·m	13.8 N·m
-10°	53.3 N·m	45.2 N·m	39.1 N·m	33.0 N·m	20.8 N·m	12.7 N·m
-5°	52.6 N·m	44.4 N·m	38.2 N·m	32.1 N·m	19.8 N·m	11.6 N·m
+0°	0.0 N·m	0.0 N·m	0.0 N·m	0.0 N·m	0.0 N·m	0.0 N·m
+5°	11.6 N·m	19.8 N·m	25.9 N·m	32.1 N·m	44.4 N·m	52.6 N·m
+10°	12.7 N·m	20.8 N·m	26.9 N·m	33.0 N·m	45.2 N·m	53.3 N·m
+15°	13.8 N·m	21.7 N·m	27.7 N·m	33.7 N·m	45.6 N·m	53.6 N·m
+20°	14.8 N·m	22.5 N·m	28.3 N·m	34.1 N·m	45.7 N·m	53.5 N·m
+25°	15.6 N·m	23.1 N·m	28.7 N·m	34.3 N·m	45.5 N·m	52.9 N·m

6.2 Maximum Loaded Weight Assembly: 45 kg (441.5 N Vertical Load)

Pitch Angle	Offset -5 cm (Heel-close)	Offset -3 cm	Offset -1.5 cm (Optimum)	Offset 0 cm (Centered)	Offset +3 cm	Offset +5 cm (Toe-close)
-25°	56.7 N·m	48.7 N·m	42.7 N·m	36.7 N·m	24.7 N·m	16.7 N·m
-20°	57.3 N·m	49.0 N·m	42.8 N·m	36.5 N·m	24.1 N·m	15.8 N·m
-15°	57.4 N·m	48.9 N·m	42.5 N·m	36.1 N·m	23.3 N·m	14.8 N·m
-10°	57.1 N·m	48.4 N·m	41.9 N·m	35.4 N·m	22.3 N·m	13.6 N·m
-5°	56.4 N·m	47.6 N·m	41.0 N·m	34.4 N·m	21.2 N·m	12.4 N·m
+0°	0.0 N·m	0.0 N·m	0.0 N·m	0.0 N·m	0.0 N·m	0.0 N·m
+5°	12.4 N·m	21.2 N·m	27.8 N·m	34.4 N·m	47.6 N·m	56.4 N·m
+10°	13.6 N·m	22.3 N·m	28.8 N·m	35.4 N·m	48.4 N·m	57.1 N·m
+15°	14.8 N·m	23.3 N·m	29.7 N·m	36.1 N·m	48.9 N·m	57.4 N·m
+20°	15.8 N·m	24.1 N·m	30.3 N·m	36.5 N·m	49.0 N·m	57.3 N·m
+25°	16.7 N·m	24.7 N·m	30.7 N·m	36.7 N·m	48.7 N·m	56.7 N·m

6.3 Torque Sweep Visualization Curves

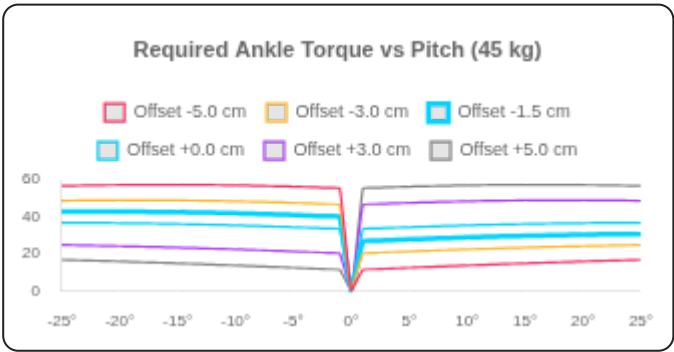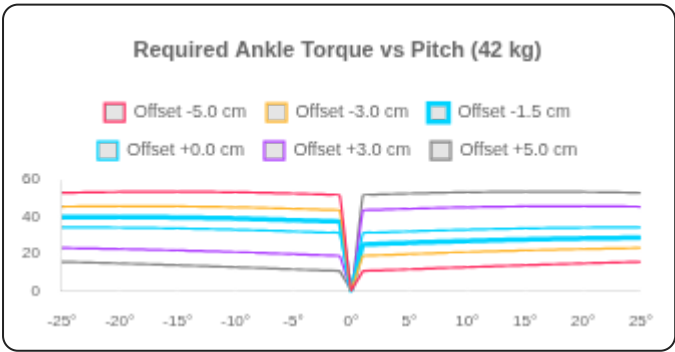

7. Actuator Torque Translation & Linkage Sharing

Robotic humanoids do not drive the ankle pivot directly. For the Angad leg, the ankle is driven by the parallel 2-RSS linkage. This mechanism converts the required ankle joint pitch torque (τ_{ankle}) into individual motor torques (τ_{motor1} , τ_{motor2}) through the transpose of the velocity Jacobian:


$$[\tau_{\text{ankle, pitch}}; \tau_{\text{ankle, roll}}] = J^T \cdot [\tau_{\text{motor1}}; \tau_{\text{motor2}}]$$

When balancing or pitching forward/backward, roll torque is zero ($\tau_{\text{ankle, roll}} = 0$). Solving this system shows that the maximum ankle joint pitch torque that can be output by the parallel linkage is:

$$\tau_{\text{ankle, cap}} = 2 \cdot \eta \cdot \tau_{\text{motor}}$$

Where η is the transmission leverage ratio of the parallel linkage. In our orthogonal linkage layout:

- Near neutral standing (0° pitch), $\eta \approx 1.5$.
- At extreme pitch tilt (−25° toe push), the mechanical advantage drops to its **minimum transmission leverage ratio: $\eta_{\min} \approx 1.15$** .

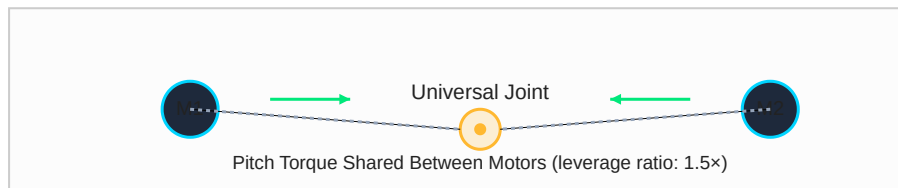

Actuator Torque Margin & Linkage Limits (Robstride RS03): The Robstride RS03 actuator provides a **rated continuous torque of 20.0 N·m** and a **peak torque of 60.0 N·m**. Using the minimum linkage transmission ratio ($\eta_{\min} \approx 1.15$) at maximum pitch tilt (−25°), the output ankle joint torque capacities are:

- **Continuous Output Capacity:** $2 \times 1.15 \times 20.0 \text{ N·m} = \mathbf{46.0 \text{ N·m}}$
- **Peak Output Capacity:** $2 \times 1.15 \times 60.0 \text{ N·m} = \mathbf{138.0 \text{ N·m}}$

Under the worst-case toe push-off condition at −25° pitch:

- **For 42 kg assembly load**, the required ankle pitch torque is **39.9 N·m**, which is safely below the continuous rated capacity of **46.0 N·m** (with a **13.3% continuous capacity safety margin**).
- **For 45 kg maximum loaded assembly**, the required ankle pitch torque is **42.7 N·m**, which is also below the continuous rated capacity of **46.0 N·m** (with a **7.2% continuous capacity safety margin**).
- The peak ankle capacity of **138.0 N·m** provides a massive safety headroom to absorb dynamic impact spikes and acceleration forces.

8. Humanoid Dynamic Simulation & Gait Stability

To verify these calculations in a dynamic walking environment, we analyzed the mass properties and walking gait telemetry of the humanoid robot using multi-body dynamics simulation:


8.1 Stance Phase Center of Mass (CoM) Trajectory

Extracting the walk telemetry from the gait simulation reveals that during the stance phase, the projection of the robot's CoM along the foot length (world Y-direction) travels from **−8.66 cm** to **+6.22 cm** relative to the foot center.

This trajectory is naturally offset backward due to the leg kinematics and torso posture during forward walk. The centroid of this dynamic envelope is:

$$\text{Center}_{\text{gait}} = (-8.66 \text{ cm} + 6.22 \text{ cm}) / 2 = \mathbf{-1.22 \text{ cm}}$$

By mounting the ankle joint with a posterior (backward) offset of **−1.5 cm**, we align the joint with the middle of the dynamic sweep. This keeps the CoM trajectory perfectly centered in the foot's support polygon, maximizing both forward and backward safety margins.

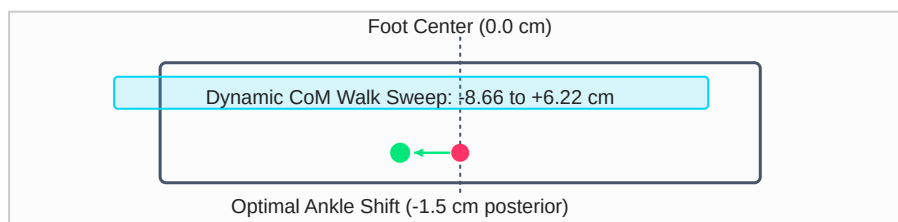

9. Engineering Design Checklist & Hardware Guidelines

This checklist serves as a guide for hardware engineers during the CAD drafting and structural assembly of the foot plate and ankle pivot connection:

⚙️ Foot Plate Manufacturing & Assembly Guidelines

- Ankle Pivot Offset Position:**
Mount the universal joint block exactly **1.5 cm posterior (backward)** from the physical center of the foot sole.
For a 15 cm foot, the UJ pivot center should be located 6.0 cm from the heel edge and 9.0 cm from the toe edge.
- Ankle Pivot Height (z_{uj}):**
Keep the vertical height from the ground contact plane to the center of the universal joint at **3.6 cm** (± 0.2 cm). Raising it increases the roll/pitch moment arm unnecessarily, while lowering it causes mechanical interference during joint tilts.
- Foot Plate Material & Weight Target:**
Use CNC-machined 7075-T6 aluminum for the foot plate, or carbon-fiber-reinforced nylon (3D printed with high infill). The total weight of the foot plate assembly (including rubber pads and U-joint brackets) must not exceed **0.38 kg** to prevent excessive swing inertia.
- Rubber Grip Padding (Sole):**
Implement a high-friction neoprene or polyurethane rubber pad (shore hardness 60A–70A) of thickness **3.0 mm** underneath the foot plate. This absorbs landing shock and ensures a static friction coefficient $\mu \geq 0.8$ to prevent slipping during toe push-offs.
- Structural Clearance:**
Ensure the foot plate is scalloped or chamfered near the rear and sides to prevent mechanical binding with the crank arms or pushrods when the ankle is at maximum roll ($\pm 20^\circ$) and maximum pitch (-25°).